


MOUNTING THE RADIO


CAUTION:
REAR SUPPORTING THE
RADIO ADDS TO THE
INSTALLATIONS
STRUCTURAL INTEGRITY.

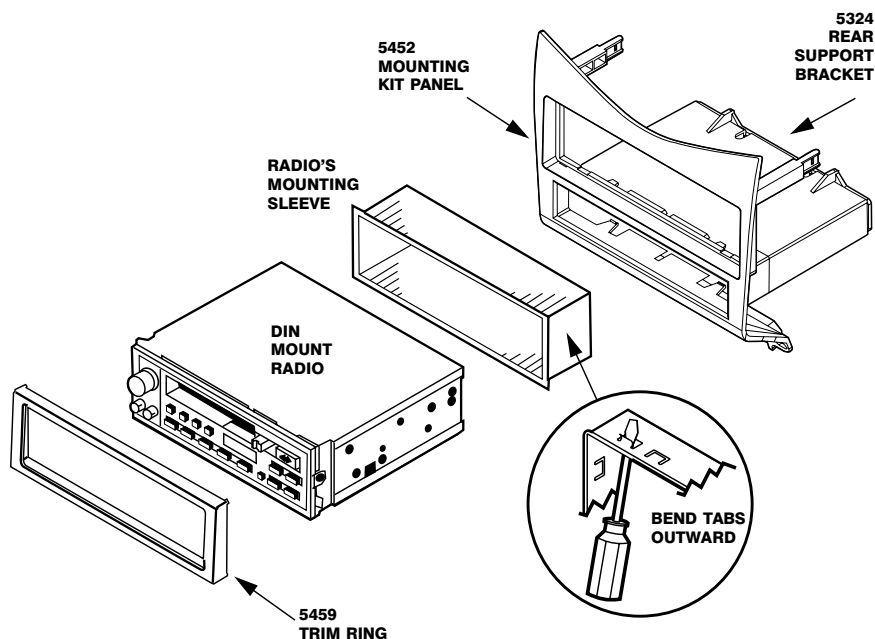

SCOSCHE

HA1573

IN-DASH INSTALLATION KIT FOR 2003-UP HONDA ACCORD (LOWER DASH POCKET) VEHICLES

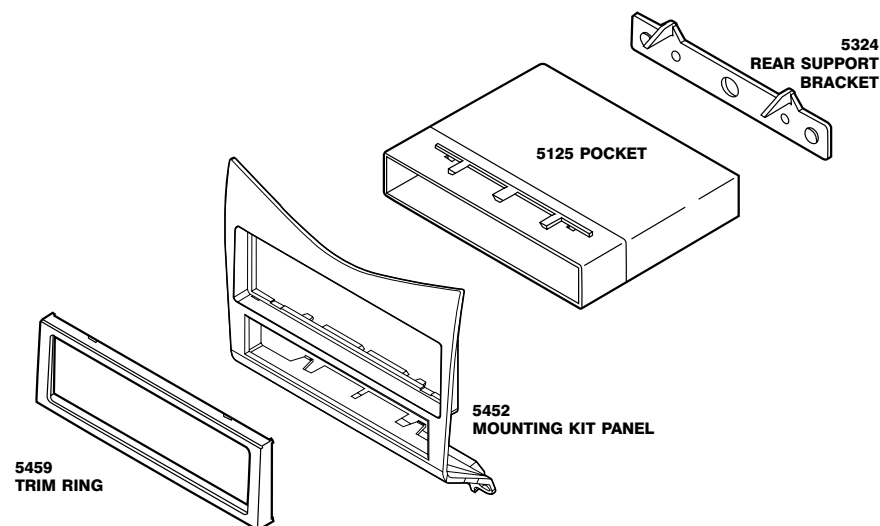

INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche HA1573 Kit. This kit was manufactured with the highest of quality standards.

CAUTION:

Disconnect your vehicle's negative battery terminal before the installation to help prevent electrical damage. We recommend the use of a volt/ohm meter over a test light to check wiring. A test light or grounded wire probe can cause damage to the vehicle's computer and/or diagnostic systems. Avoid all factory air bag wiring - air bags can accidentally deploy causing serious injury or death.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: www.scosche-cars.com

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (HA1573) in 2003-UP Honda Accord Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2007 SCOSCHE INDUSTRIES, INC.

SI 05/07- HA1573 (3000467)

KIT PREPARATION

1. Remove (2) white plastic retaining clips from top brackets on factory pocket/panel.
2. Remove (2) screw brackets from bottom of factory pocket/panel.
3. Attach (2) white plastic retaining clips to the top brackets on the Scosche kit panel. See Illustration A.
4. Insert (2) screw brackets into openings in Scosche kit panel. See Illustration B.

ILLUSTRATION A


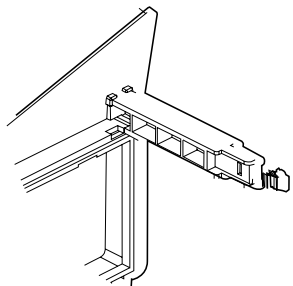


ILLUSTRATION B

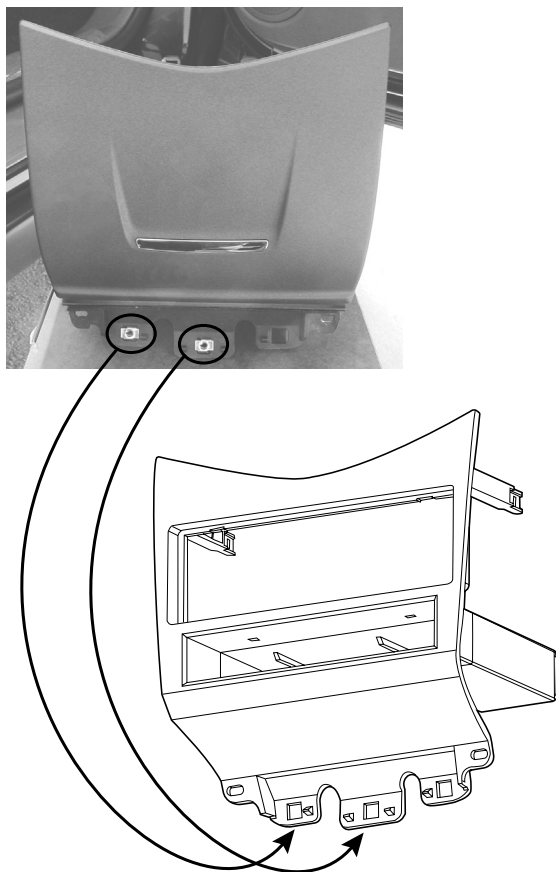


POCKET ASSEMBLY

A. ATTACHING THE REAR BRACKET:

Align the two (2) screw emboss locations to the matching locations on pocket. When aligned, slide the bracket together. Screw the two (2) supplied screws to screw emboss locations

B. ATTACHING THE POCKET:

Align the pocket to the snaps of kit panel. Snap the pocket into place on the back of kit panel.

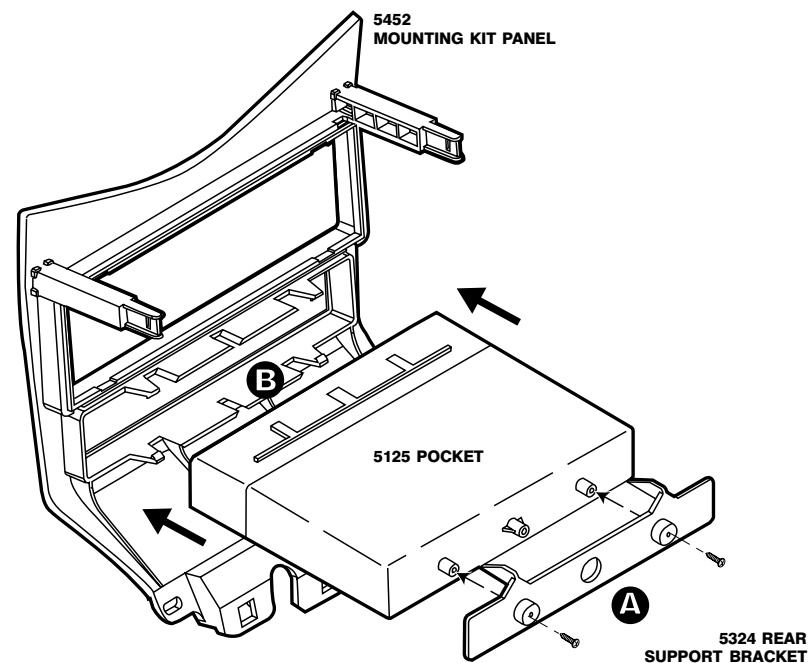

STEREO INSTALLATION

TO REMOVE POCKET BELOW FACTORY RADIO

1. Gently pry up to remove shift trim bezel.
2. Open ashtray/small storage pocket. Remove pocket. Extract two screws from pocket opening. Unplug and remove assembly.
3. Extract two screws from lower part of large dash storage pocket. With pocket door closed pull toward shifter to unsnap clips and remove.
4. Extract two 8mm bolts from under radio assembly brackets.

CONTINUE TO REMOVE FACTORY RADIO

5. From above radio assembly gently pry out on vent/hazard panel. Continue along both sides of panel, gently releasing clips. Lift up, unplug, and remove.
6. Extract three screws from top of radio assembly. Pull toward shifter to unsnap clips. Unplug and remove.